



# Advanced PA Tubing

An Excellent Alternative to Polyamide 12

aerospace  
climate control  
electromechanical  
filtration  
fluid & gas handling  
hydraulics  
pneumatics  
process control  
sealing & shielding



ENGINEERING YOUR SUCCESS.



## ADVANCED PA TUBING



### For Optimizing Your Equipment, Advanced PA Tubing Guarantees:

- Material availability
- Technical performance: thanks to unsurpassed temperature and pressure resistance
- Versatility: due to chemical compatibility and suitability to a large range of applications
- Environmentally-friendly approach

### The Best Offer for:

- Better flexibility than all other polyamide tubing
- Superior mechanical performance: excellent abrasion and shock resistance

### Advanced PA Tubing Conforms to:

- NF E49-100: for high quality design and long-term reliability
- DIN 74324, DIN 73378 and ISO 7628\*: for compatibility with the most demanding on-board systems

\*Test results from certified laboratory expected in 2012

## > Technical Characteristics




<b>Suitable Fluids</b>	Compressed air, various chemicals, gases and liquids*
<b>Working Pressure</b>	Vacuum up to 50 bar (as per diameter and temperature)
<b>Working Temperature</b>	-40°C to +100°C
<b>Material</b>	Bio-sourced polyamide (68 shore D)

\*of Compatibility Chart, page 6

## > Dimensions


Ø (mm)		Wall Thickness (mm)		Max. Ovality (mm)	Min. Bend Radius@ +20°C (mm)
O.D.	Tolerances	e	Tolerances		
4	+ 0.05 - 0.08	0.65	± 0.08	< 0.16	10
4	+ 0.05 - 0.08	1	± 0.08	< 0.16	10
6	+ 0.05 - 0.10	1	± 0.08	< 0.20	15
8	+ 0.05 - 0.10	1	± 0.08	< 0.20	25
10	+ 0.05 - 0.10	1	± 0.08	< 0.20	50

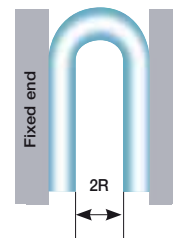

### Measurement method

of the bending radius:  
Bend the tube into the U-form at a temperature of +20°C (+/- 3°C).  
Hold one end and close loop gradually up to 2R measurement between both ends.

## > Advanced PA Tubing Performance

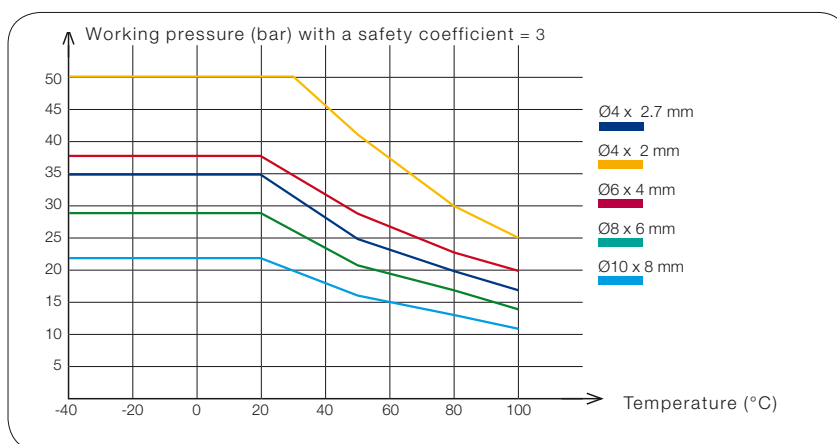

To calculate burst measurements, the values in this graph should be multiplied by 3.

Close tolerance to perfect sealing with Parker Legris fittings based on NF E49-100.

With compression fittings, a ferrule must be used.

Where Polyamide 12 was used in standard applications, there is no risk of switching to Advanced PA tubing.

## > Tube Marking

- Marking every metre
- Time saved when cutting specific length
- Immediate identification of remaining quantity



## > Comparative Product Advantages: Polyamide 12 vs. Advanced PA Tubing

### Semi-Rigid Polyamide 12 (PHL\*)

Parker Legris' polyamide tubing provides optimum mechanical properties, has good chemical resistance and conforms to the NF E49-100 standard. Shore hardness of semi-rigid tubing is 60D.

#### Advantages of Parker Legris' Polyamide Tubing

- Large range of working temperatures and pressures
- Good chemical resistance
- Good humidity resistance
- Constant rigidity, good ageing
- Good absorption of vibrations
- Strong abrasion resistance
- Silicone-free
- Tube length marked every metre

### Advanced PA Tubing

Very good flexibility and excellent mechanical resistance, combined with a bio-sourced material, allow Parker Legris' Advanced PA tubing to optimize cabling installation without compromising quality.


Advanced PA tubing has a shore hardness of 68D and conforms to the NF E49-100 standard.

#### Advantages of Parker Legris' Advanced PA Tubing

- High resistance to temperature and pressure
- Good chemical resistance
- Very good flexibility and small bend radius
- Constant rigidity, good ageing
- Bio-sourced material
- Strong abrasion resistance
- Silicone-free
- Tube length marked every metre

\*PHL (Polymer  $\Omega$ -Dodecanolactam): plasticized, expandable, heat-ageing and light stabilized.

## > Technical Features at a Glance

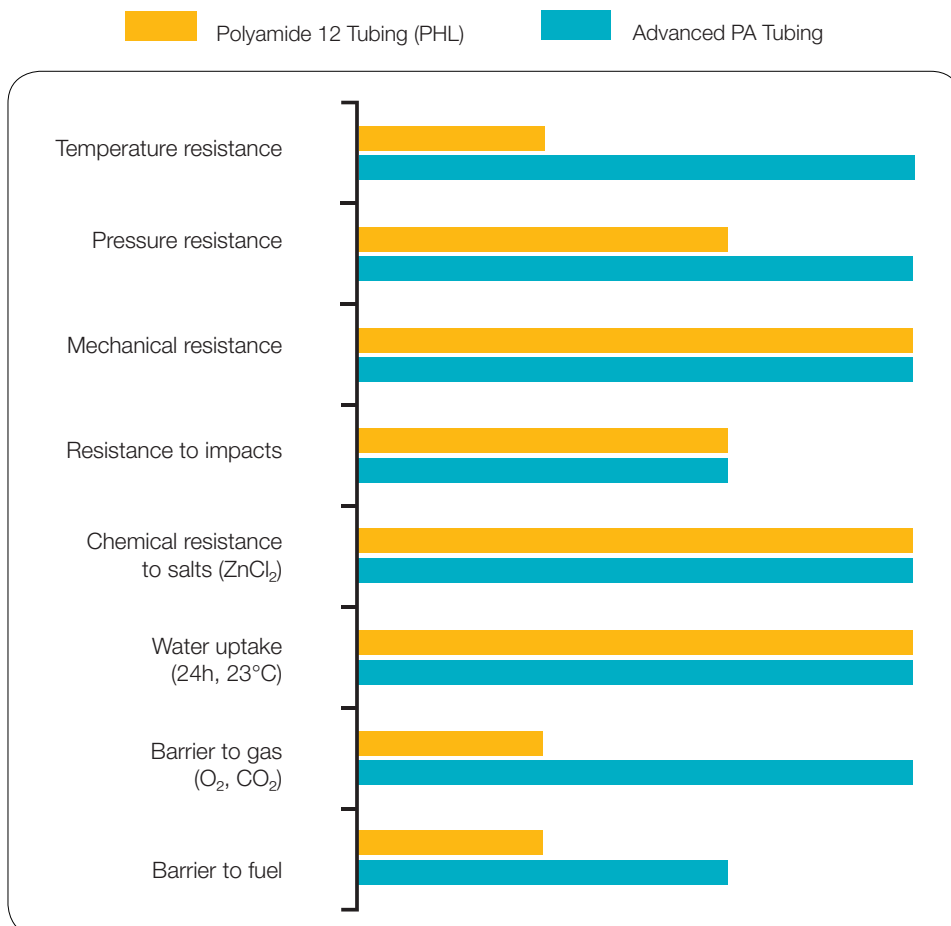

## > Advanced PA: Eco-Design Approach



In the manufacturing of Parker Legris' Advanced PA, we have applied the Product Life Cycle Analysis (PLCA). This approach aims to evaluate the environmental impact of a product during its different life cycle stages and thereby:

- allows for the protection of natural resources
- guarantees the improvement of equipment performance
- contributes to your ISO 14001 certification



The use of organic carbon for the polymer manufacturing of this Advanced PA tubing significantly reduces its:

- environmental footprint, hence the depletion of our planet's natural resources
- CO<sub>2</sub> emissions that are in part responsible for global warming

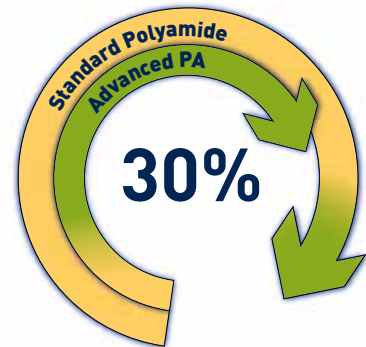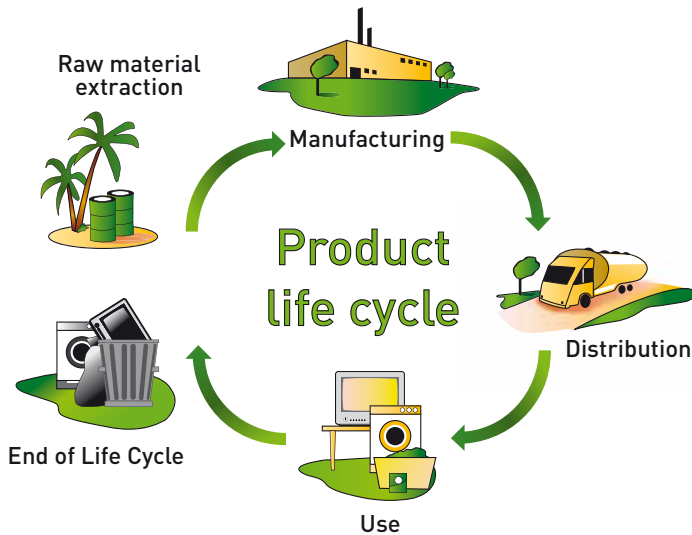


**Global Warming:**  
Gain in terms of CO<sub>2</sub> emissions  
during product's life cycle

## > Advanced PA: Carbon Cycle

The carbon cycle is an important part of the Product Life Cycle Analysis because it explains:

- the manufacturing process of our Advanced PA tubing
- the impact that a product has on its environment

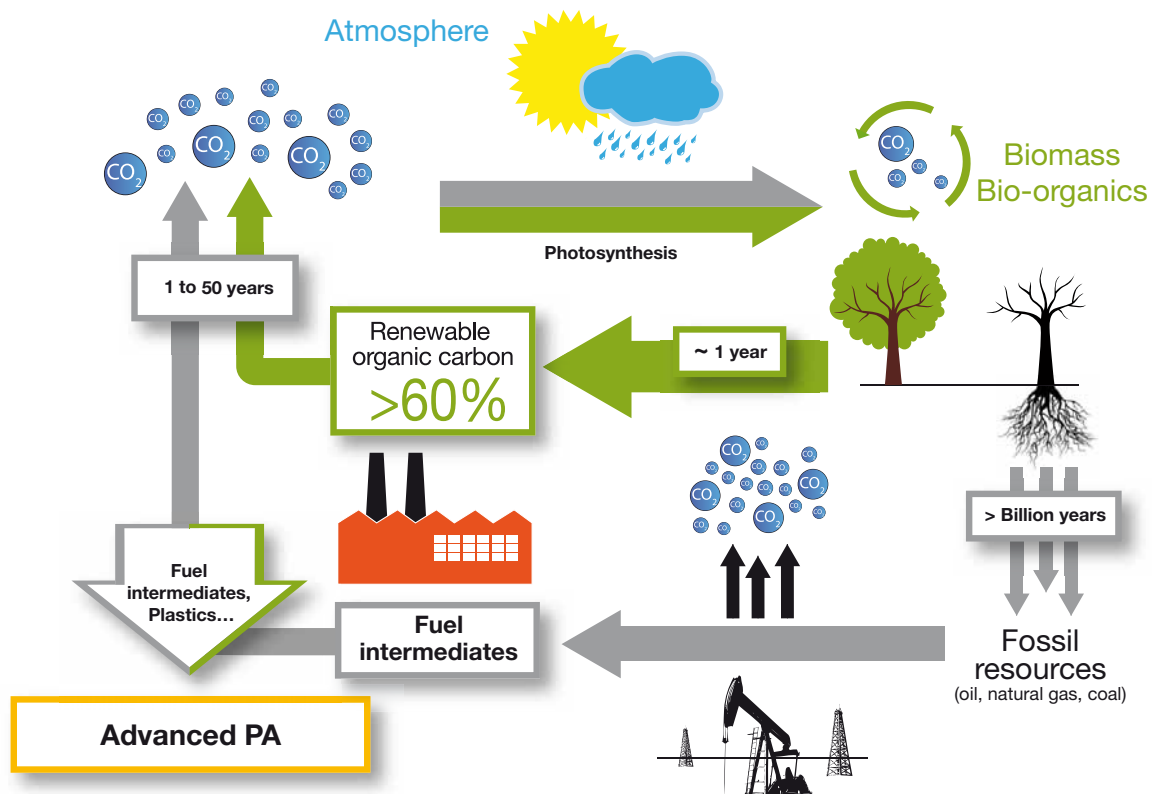

## > Chemical Compatibility Chart

1	Recommended
2	Satisfactory
3	Not recommended

Substances	PA	Advanced PA
Acetaldehyde	1	1
Acetone	1	1
Acetylene	1	1
Acid, acetic	-	2
Acid, hydrochloric up to 10%	1	1
Acid, citric	1	1
Acid, chromic up to 10%	3	3
Acid formic up to 10%	-	2
Acid, nitric	1	1
Phosphoric acid up to 50%	3	3
Acid, sulphuric up to 10%	1	2
Ammonia and gaseous	1	1
Benzene	1	1
Bromine	3	2
Butane	1	1
Butyl acetate	1	1
Butylic and Butyl alcohol	1	1
Calcium chloride	1	1
Carbon tetrachloride (sodium hypochlorite)	3	2
Copper sulphate	1	1
Compressed air	1	1
Cyclohexanone	1	1
Ethanol	-	1
Ethyl acetate	1	1
Ethyl alcohol	1	1
Ethylen oxide	1	1
Freon 12-22	1	1
Formalin (formaldehyde)	2	1
Glucose	1	1
Hydrogen	1	1
Hydrogen peroxide (perydrol)	2	3
Kerosene	1	1
Magnesium chloride (up to 30%)	-	1
Methane	1	1
Methyl acetate	1	-
Methyl alcohol (pure)	1	1
Methyl bromide	1	1
Methyl chloride	1	2





For complementary information, please contact us.





Substances	PA	Advanced PA
Methyl ethyl ketone	1	1
Methyl isobutyl ketone	1	1
Oils (cutting)	1	1
Oils (ASTM class A)	1	1
Oils (ASTM class B)	1	1
Oils (ASTM class C)	1	1
Oils (ASTM class 1)	1	1
Oils (ASTM class 2)	1	1
Oils (ASTM class 3)	1	1
Oils, engine (diesel)	1	1
Oils, paraffin	1	1
Oxygen	2	2
Ozone	3	3
Perchlorate ethylene	2	1
Phenols	3	3
Potash	1	1
Potassium chloride up to 40%	1	1
Potassium Hydroxide	-	1
Potassium sulphate	1	1
Propane	1	1
Soda 50%	1	1
Sodium carbonate	1	1
Sodium chloride	1	1
Sodium hydroxide (caustic soda)	2	2
Sodium hypochlorite( bleach)	1	1
Sulphurous anhydride	2	2
Petrol with up to 40% aromatic	1	1
Petrol with more than 40% aromatic	1	1
Tetrachloroethylene	1	1
Toluene	1	1
Tributylphosphate	1	1
Trichlorethylene	1	1
Water (drinking, food)	3	3
Water (Industrial)	1	1
Water (distilled)	1	1
Water (sea)	2	2
Xylem	1	1
Zinc chloride	1	1

## > Polyamide 12 vs. Advanced PA Tubing

**1025P** Close tolerance semi-rigid polyamide tubing, 25 m rolls





**1025P..C** Advanced PA Tubing, 25 m rolls





Length: 25 m						
O.D. tube (mm)	I.D. tube (mm)	Minimum bend radius for tube at ambient temp. (mm)				 for 25 m
4	2	25	1025P04 00	1025P04 01	1025P04 04	0.318
4	2.7	30	1025P04 00 27	1025P04 01 27	1025P04 04 27	0.254
6	4	35	1025P06 00	1025P06 01	1025P06 04	0.535
8	6	55	1025P08 00	1025P08 01	1025P08 04	0.748
10	8	90	1025P10 00	1025P10 01	1025P10 04	0.989

Length: 25 m						
O.D. tube (mm)	I.D. tube (mm)	Minimum bend radius for tube at ambient temp. (mm)				 for 25 m
4	2	10	1025P04C00	1025P04C01	1025P04C04	0.318
4	2.7	10	1025P04C00 27	1025P04C01 27	1025P04C04 27	0.254
6	4	15	1025P06C00	1025P06C01	1025P06C04	0.535
8	6	25	1025P08C00	1025P08C01	1025P08C04	0.748
10	8	50	1025P10C00	1025P10C01	1025P10C04	0.989

**1100P** Close tolerance semi-rigid polyamide tubing, 100 m rolls

**1100P..C** Advanced PA Tubing, 100 m rolls

Length: 100 m						
O.D. tube (mm)	I.D. tube (mm)	Minimum bend radius for tube at ambient temp. (mm)				 for 100 m
4	2	25	1100P04 00	1100P04 01	1100P04 04	1.152
4	2.7	30	1100P04 00 27	1100P04 01 27	1100P04 04 27	0.893
6	4	35	1100P06 00	1100P06 01	1100P06 04	1.799
8	6	55	1100P08 00	1100P08 01	1100P08 04	2.898
10	8	90	1100P10 00	1100P10 01	1100P10 04	3.667

Length: 100 m						
O.D. tube (mm)	I.D. tube (mm)	Minimum bend radius for tube at ambient temp. (mm)				 for 100 m
4	2	10	1100P04C00	1100P04C01	1100P04C04	1.152
4	2.7	10	1100P04C00 27	1100P04C01 27	1100P04C04 27	0.893
6	4	15	1100P06C00	1100P06C01	1100P06C04	1.799
8	6	25	1100P08C00	1100P08C01	1100P08C04	2.898
10	8	50	1100P10C00	1100P10C01	1100P10C04	3.667

NB: for other diameters or colours, please continue to order close tolerance semi-rigid polyamide tubing.

## > Packaging

### Tubepack® Advantages:

- Compactness: optimized sizes
- Easy to stock, to use and to identify
- Available on stock




### Drum Advantages:

- For optimized handling
- Available on request



## > Product Codes

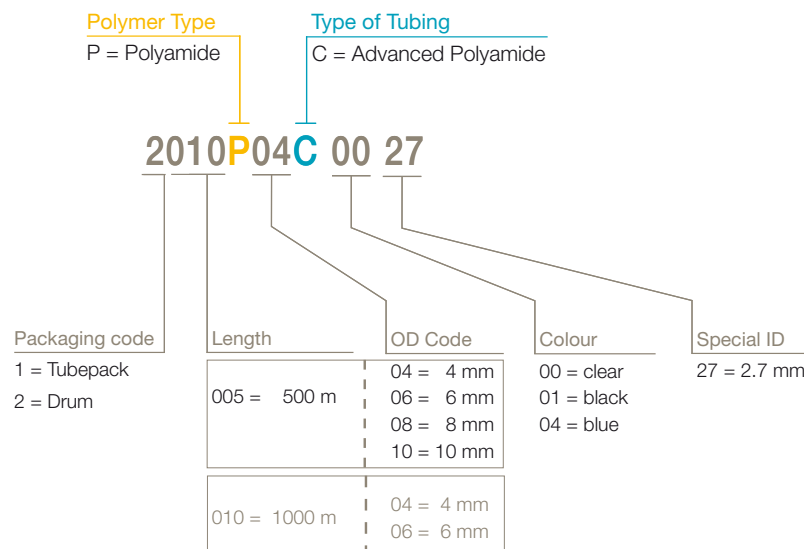

# Parker Worldwide

## Europe, Middle East, Africa

**AE – United Arab Emirates,** Dubai  
Tel: +971 4 8127100  
parker.me@parker.com

**AT – Austria,** Wiener Neustadt  
Tel: +43 (0)2622 23501-0  
parker.austria@parker.com

**AT – Eastern Europe,** Wiener Neustadt  
Tel: +43 (0)2622 23501 900  
parker.easteurope@parker.com

**AZ – Azerbaijan,** Baku  
Tel: +994 50 2233 458  
parker.azerbaijan@parker.com

**BE/LU – Belgium,** Nivelles  
Tel: +32 (0)67 280 900  
parker.belgium@parker.com

**BY – Belarus,** Minsk  
Tel: +375 17 209 9399  
parker.belarus@parker.com

**CH – Switzerland,** Etoy  
Tel: +41 (0)21 821 87 00  
parker.switzerland@parker.com

**CZ – Czech Republic,** Klecany  
Tel: +420 284 083 111  
parker.czechrepublic@parker.com

**DE – Germany,** Kaarst  
Tel: +49 (0)2131 4016 0  
parker.germany@parker.com

**DK – Denmark,** Ballerup  
Tel: +45 43 56 04 00  
parker.denmark@parker.com

**ES – Spain,** Madrid  
Tel: +34 902 330 001  
parker.spain@parker.com

**FI – Finland,** Vantaa  
Tel: +358 (0)20 753 2500  
parker.finland@parker.com

**FR – France,** Contamine s/Arve  
Tel: +33 (0)4 50 25 80 25  
parker.france@parker.com

**GR – Greece,** Athens  
Tel: +30 210 933 6450  
parker.greece@parker.com

**HU – Hungary,** Budapest  
Tel: +36 1 220 4155  
parker.hungary@parker.com

**IE – Ireland,** Dublin  
Tel: +353 (0)1 466 6370  
parker.ireland@parker.com

**IT – Italy,** Corsico (MI)  
Tel: +39 02 45 19 21  
parker.italy@parker.com

**KZ – Kazakhstan,** Almaty  
Tel: +7 7272 505 800  
parker.easteurope@parker.com

**NL – The Netherlands,** Oldenzaal  
Tel: +31 (0)541 585 000  
parker.nl@parker.com

**NO – Norway,** Asker  
Tel: +47 66 75 34 00  
parker.norway@parker.com

**PL – Poland,** Warsaw  
Tel: +48 (0)22 573 24 00  
parker.poland@parker.com

**PT – Portugal,** Leca da Palmeira  
Tel: +351 22 999 7360  
parker.portugal@parker.com

**RO – Romania,** Bucharest  
Tel: +40 21 252 1382  
parker.romania@parker.com

**RU – Russia,** Moscow  
Tel: +7 495 645-2156  
parker.russia@parker.com

**SE – Sweden,** Spånga  
Tel: +46 (0)8 59 79 50 00  
parker.sweden@parker.com

**SK – Slovakia,** Banská Bystrica  
Tel: +421 484 162 252  
parker.slovakia@parker.com

**SL – Slovenia,** Novo Mesto  
Tel: +386 7 337 6650  
parker.slovenia@parker.com

**TR – Turkey,** Istanbul  
Tel: +90 216 4997081  
parker.turkey@parker.com

**UA – Ukraine,** Kiev  
Tel: +380 44 494 2731  
parker.ukraine@parker.com

**UK – United Kingdom,** Warwick  
Tel: +44 (0)1926 317 878  
parker.uk@parker.com

**ZA – South Africa,** Kempton Park  
Tel: +27 (0)11 961 0700  
parker.southafrica@parker.com

## North America

**CA – Canada,** Milton, Ontario  
Tel: +1 905 693 3000

**US – USA,** Cleveland  
Tel: +1 216 896 3000

## Asia Pacific

**AU – Australia,** Castle Hill  
Tel: +61 (0)2-9634 7777

**CN – China,** Shanghai  
Tel: +86 21 2899 5000

**HK – Hong Kong**  
Tel: +852 2428 8008

**IN – India, Gurgaon**  
Tel: +91 124 459 0600  
legris.india@parker.com

**JP – Japan,** Tokyo  
Tel: +81 (0)3 6408 3901

**KR – South Korea,** Seoul  
Tel: +82 2 559 0400

**MY – Malaysia,** Shah Alam  
Tel: +60 3 7849 0800

**NZ – New Zealand,** Mt Wellington  
Tel: +64 9 574 1744

**SG – Singapore**  
Tel: +65 6887 6300

**TH – Thailand,** Bangkok  
Tel: +662 186 7000-99

**TW – Taiwan,** Taipei  
Tel: +886 2 2298 8987

## South America

**AR – Argentina,** Buenos Aires  
Tel: +54 3327 44 4129

**BR – Brazil,** Sao Jose dos Campos  
Tel: +55 800 727 5374

**CL – Chile,** Santiago  
Tel: +56 2 623 1216

**MX – Mexico,** Apodaca  
Tel: +52 81 8156 6000

### European Product Information Centre

Free phone: 00 800 27 27 5374

(from AT, BE, CH, CZ, DE, DK, EE, ES, FI, FR, IE, IL, IS, IT, LU, MT, NL, NO, PL, PT, RU, SE, SK, UK, ZA)

